

Sterilization Labeling System



User Guide

BEFORE YOU START

About This Document

The SteriDate2 Labeling System is available in two options:

- SteriDate2 Stand-Alone For use as a self-service kiosk
- SteriDate2 for PC For use on a PC workstation

This document contains easy to follow instructions on how to setup, operate and maintain both systems. We suggest reviewing all its sections before starting.

Proprietary Statement

The SteriDate software and this manual are proprietary products of MedVantage Inc. and are protected by United States and foreign copyright laws. The manual is intended solely for the information and use of parties setting up, operating and maintaining the system described herein and may not be used, reproduced, or disclosed to any other parties for any other purpose without the express written permission of MedVantage, Inc.

Liability Disclaimer

MedVantage takes steps to ensure that it's published specifications and manuals are correct; however, errors do occur. MedVantage reserves the right to correct any such errors and disclaims liability resulting therefrom.

Data Backup

MedVantage is not responsible for any loss of data entered into the system. We suggest using the Backup tool found under Windows Settings. The backup should include the folder containing the SteriDate data files and the folder where the SteriDate application is installed.

Product Improvements

Continuous improvement of products is a policy of MedVantage. All specifications and designs are subject to change without notice.

Limitation of Liability

In no event shall MedVantage or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if MedVantage has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.


TABLE OF CONTENTS

Bef	ore Y	You Start	2
Tak	ole of	f Contents	3
1.	Ov	verview	4
	1.1	Unpacking	4
	1.2	Terminal Overview	5
	1.3	Printer Overview	5
2.	Se	t Up	6
	2.1	Setting Up the Terminal	6
	2.2	Setting Up the Printer(s)	6
:	2.3	Installing the Printer Drivers	7
	2.4	Installing the SteriDate Software	9
	2.5	Installing Data Files	10
	2.6	Adjusting the Settings	11
:	2.7	Adjusting Category Properties	12
3.	Ор	peration	13
3	3.1	Loading Labels	13
3	3.2	Loading the Ribbon	14
3	3.3	Starting the System	15
3	3.4	Printing Load Labels	16
3	3.5	Printing Instrument Labels	17
3	3.6	Printing Loaner Tray Labels	18
3	3.7	Creating New Labels	19
4.	Má	aintenance	20
5.	Tro	oubleshooting	21
6.	Pri	inter Calibrations	22
	То	calibrate the Label Gap Sensor	22
	Ot	her Calibrations	22
7.	Lal	bel Formats	23
8.	Lal	bel Data Sources	32
9.	Ab	oout SteriDate Labels	33
10	Te	echnical Support	34


1. OVERVIEW

1.1 Unpacking

- One Printer with USB Cable, Power Supply and Power Cord (2nd Printer Optional)
- One Terminal with Power Supply and Power Cord (SteriDate2 Stand-Alone only)
- One VESA Wall Mount (Optional)
- One Cable Management Sleeve
- One USB Flash Drive with SteriDate software (SteriDate for PC only)
- This User Guide

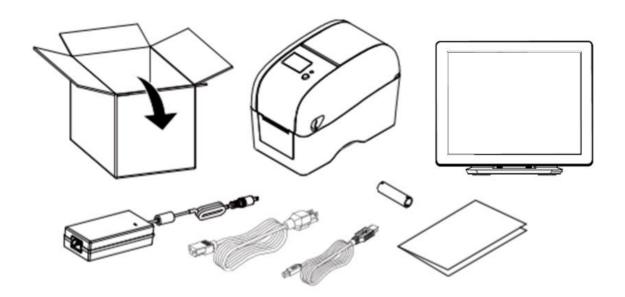


1.2 Terminal Overview

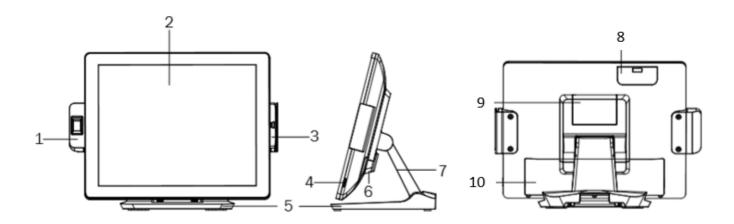

No.	Description		
1 Fingerprint (option)			
2	Touch screen		
3	Magnetic Stripe Reader (option)		
4	Power button		
5	Stand		

No.	Description
6	VESA bottom cover
7	Stand front cover
8	HDD Cover
9	VESA top cover
10	Cable & I/O ports cover

1.3 Printer Overview

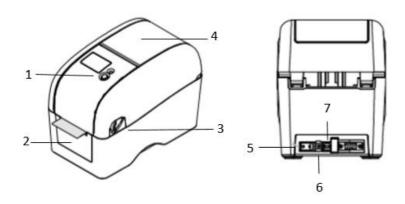


No.	Description
1	Feed button
2	Paper exit
3	Top cover open level
4	Media view window
5	Power switch
6	Power jack socket
7	USB port

2. SET UP


2.1 Setting Up the Terminal

- 1. Place the terminal on a flat, secure surface, or VESA mount.
- 2. To VESA mount the terminal with its articulating stand, attach the VESA mount to the bottom of the stand.
- 3. To VESA mount the terminal flush to the wall, slide the VESA bottom cover outwards, loosen the thumb screw and slide the stand down to release it, then attach the VESA mount to the back of terminal.
- 4. Plug the power cord into the power supply.
- 5. Plug the power cord into a properly grounded power strip or outlet.

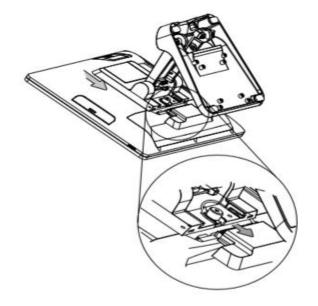

2.2 Setting Up the Printer(s)


- 1. Place the printer on a flat, secure surface.
- 2. Connect the USB cable labeled **P1** from the terminal to the USB port on the back of the printer labeled **P1**.
- 3. Make sure the power switch is set to **OFF**.
- 4. Plug the power supply into the printer.
- 5. Plug the power cord into the power supply.
- 6. Plug the power cord into a properly grounded power strip or outlet.
- 7. Set the power switch to **ON**.
- 8. Repeat these steps to connect a second printer labeled **P2**.

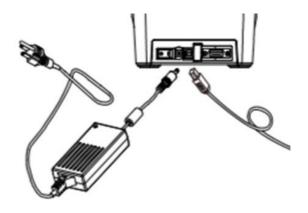

2.3 Installing the Printer Drivers

Note: On the SteriDate Stand-Alone system, the printers and their drivers come pre-installed.


- 1. Set the printer power switch **OFF**, connect the USB cable, and then set the printer power switch **ON**.
- 2. Open the folder containing the SteriDate software, navigate to the **Printer Driver > 2019.1 M1** folder and then double click on the **DriverWizard.exe** file.

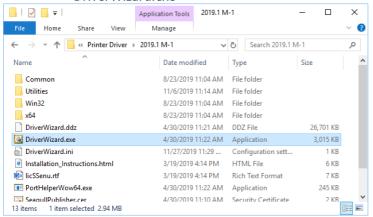


3. Select Install Printer Drivers, and then click Next.



4. Select Install a driver for a Plug and Play printer, then click Next.

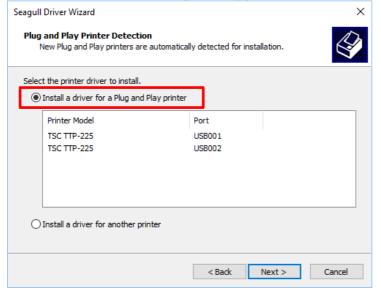

5. Click Next.

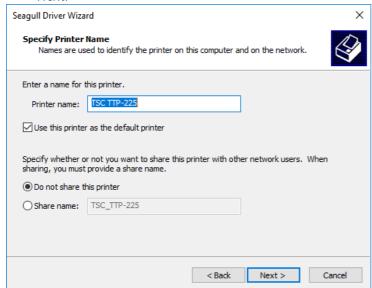

6. Click Finish.



7. Once Click Close.



2.4 Installing the SteriDate Software

Note: The SteriDate software comes pre-installed on the SteriDate2 Stand-Alone system.

Grant of License

Use of the SteriDate software implies you agree to be bound by the terms of the End User License Agreement presented during the software installation, which include that for each Software license key that you purchase from MedVantage, you may use the Software on one single Computer.


System Requirements

- Windows 7 or higher (64-bit or 32-bit)
- .NET Framework 4.5
- Processor: 1 GHz minimum recommended
- RAM: 1 GB minimum recommended
- Storage: 2 GB minimum recommended

- Display: Touchscreen suggested
- USB Ports: One for each SteriDate printer
- Installation: Single .EXE setup. Per-machine (admin rights required)

Starting the Install

1. Open the folder containing the SteriDate software, and then double click on the .exe file.

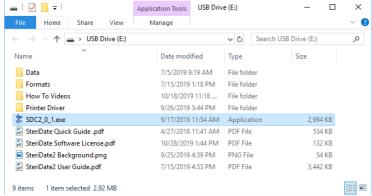

2. Check the I agree to the License terms and conditions checkbox, and then press NEXT.




- 3. Enter the Serial Key, shown on your Software License in the SteriDate software folder, and press INSTALL.
- 4. Once the installation is complete, press **FINISH**.
- 5. To start the software, set the power switch on the printer(s) to **ON**, and then restart the terminal or PC.

2.5 Installing Data Files

To install any data files preconfigured for you by MedVantage:

- 1. Open the folder containing the SteriDate software.
- 2. Open the **Data** folder.

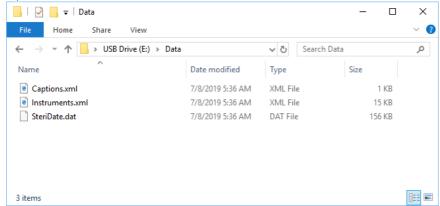

3. Copy all files with a .dat and a .xml extension, and then paste them into the C:\ProgramData\SteriDate folder.


2.6 Adjusting the Settings

The Administrator's Password is required to access the settings. These settings control the appearance and behavior of the program, printer settings and user options.

- 1. Press **Login**. Enter the Administrator's Password (default is Admin, case sensitive), and then press **Enter**.
- 2. Press Settings.



3. Modify the settings as needed.

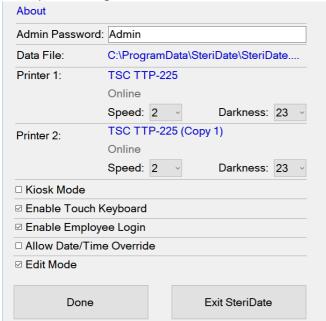

- 4. To return to the main screen, press **Done** to return to the main screen.
- 5. To close the application, press **Exit SteriDate**.

Admin Password: Required to access the Settings. This password can be changed and is case sensitive.

Default: Admin

Data File: The path and name of the SteriDate data file which stores all the labels.

Default: C:\Program Data\SteriDate\SteriDate.dat.

Printer 1 and Printer 2: The selected printer and its status (Online, Offline, Not Installed).

Default Names: TSC TTP-225 and TSC TTP-225 (Copy 1)

Default Speed: 2 Default Darkness: 23

Kiosk Mode: Check this box to prevent users from exiting the SteriDate application - recommended when using a SteriDate Terminal or Tablet.

Uncheck this box to use SteriDate as a standard desktop application - recommended when using a desktop PC.

Default: Checked

Enable Touch Keyboard: Check this box to enable use of the on-screen touch keyboard - recommended when using a SteriDate Terminal or Tablet.

Uncheck this box to only use an attached keyboard and mouse - recommended when using a desktop PC.

Default: Checked

Enable Employee Login: Check this box to require users log in in order to print labels.

Default: Checked

Allow Date/Time Override: Check this box to allow users to modify dates and times before printing labels.

Default: Unchecked


Edit Mode: Check this box to modify Category Settings and create new labels. Uncheck this box to resume normal Print Mode. The system automatically goes into Edit Mode when the Admin logs in and resumes Print Mode when the Admin logs off.

Default: Unchecked


2.7 Adjusting Category Properties

Category Properties include the text shown on the Category button, Tab Names, label format, and printer (P1 or P2). These properties are saved in the data file, which may have been preconfigured for you by MedVantage.

- Press Login. Enter the Administrator's Password (default is Admin, case sensitive), and then press Enter
- 2. Press any of the five color-coded **Category** buttons.

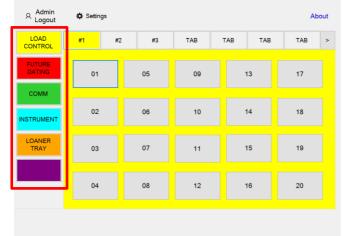

3. Modify the settings as needed.

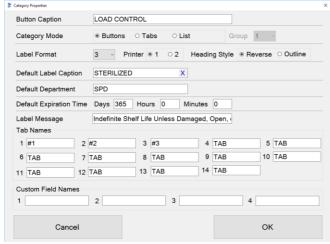

4. Press Done.

Button Caption: The text shown on the Category button. Prints on some label formats. See the *Label Formats* section.

Category Mode: Controls how each Category functions.

- Buttons: Select a Button to print labels. Use for Load Control w/Load No., Cycle Count, Sequencing, Future Dating and Communication label formats.
- Tabs: Select a Tab to print labels. Use for Load Control w/Cycle Count.
- **List:** Select items from a list to print labels. Use for Peel Pack and Instrument labeling.

Group: Use to organize a list of items in up to 6 different groups. For example, group items by Vendor, Location, or Surgeon.

Label Format: The label format number assigned to that Category. See the *Label Formats* section.

Printer 1 or 2: The label printer assigned to that Category.

Heading Style: Determines how the Header is printed. Only applies to label formats show (*Header*) in their specifications. See the *Label Formats* section.

- Reverse: Header prints in reverse, inside a solid black box. (Default)
- Outline: Header prints normal, inside an outlined black box.

Default Label Caption: Prints on the label if the Label Caption on the Item Properties is blank. Only applies to label formats that use the Label Caption field. See the Label Formats section.

Default Department: Prints on the label if the Department on the Item Properties is blank. Only applies to the label formats that use the Department field. See the *Label Formats* section.

Label Message: Prints on label formats that use the Label Message field. See the *Label Formats* section.

Tab Names: The text shown on each Tab. Prints on label formats that use the Tab Name field. See the *Label Formats* section.

Custom Field Names: Custom fields you can define. When printing labels, the user will be prompted to enter the data for these fields. Only applies to the label formats that use the Custom Fields. See the *Label Formats* section.


3. OPERATION

3.1 Loading Labels

1. Open the printer top cover by pulling the tabs located on each side towards the front of the printer, and then lift the top cover to the maximum open angle.




2. Separate the media holders to the label roll width.

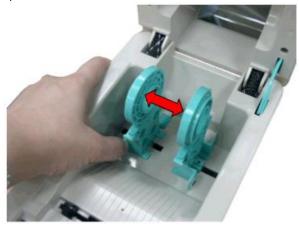

3. Place the paper, printing side face up, through the media guides, media sensor and place the label leading edge onto the platen roller.



4. Move the media guides to fit the label width by turning the media guide adjuster knob.

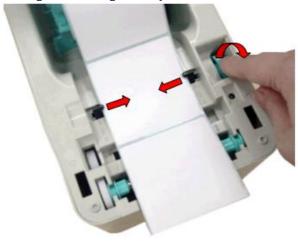

5. Hold the top cover and press the top cover support to disengage the top cover support with lower inner cover. Gently close the top cover. Make sure the cover latches securely.



3.2 Loading the Ribbon

1. Open the printer top cover by pulling the tabs located on each side towards the front of the printer, and then lift the top cover to the maximum open angle.



2. Insert the ribbon right side onto the supply hub. Align the notches on the left side and mount onto the spokes.



3. Open the ribbon access cover.




4. Insert the rewind core right side onto the rewind hub.



5. Pull the leading ribbon to pass the print head. Stick the ribbon onto the ribbon rewind core.




6. Turn the ribbon rewind gear until the ribbon plastic leader is thoroughly wound and the black section of the ribbon covers the print head.

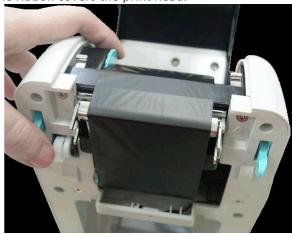


7. Close the ribbon access cover and the top cover.

3.3 Starting the System

1. Set the power switch located on the back of the printer(s) to **ON**.

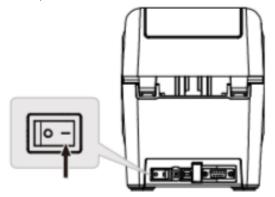

2. Restart the terminal or PC. On the terminal, the power button is located on the right side of the screen.

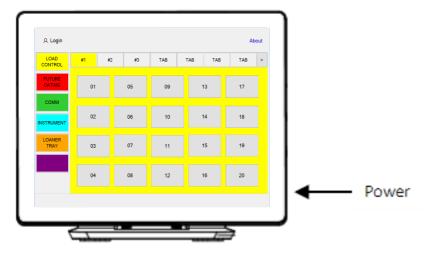

3. Once the terminal starts and the main screen is displayed, the system is ready for use.

3.4 Printing Load Labels

- 1. Press **Login**. Enter your Employee ID, and then press **Enter**.
- 2. Press **Load Control.** Select a sterilizer, and then select a load number.



3. Enter the Label Caption. Begin typing any portion to select from a previosly saved list.




4. Enter the Print Quantity (number of labels to print) and then press **Print**.

3.5 Printing Instrument Labels


- 1. Press Login. Enter your Employee ID and press Enter.
- 2. Press Instrument.



3. Enter the Description. Begin typing any portion to select from a previously saved list.

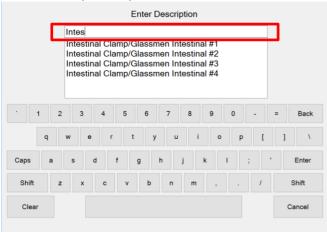

4. Enter or edit the data as needed.

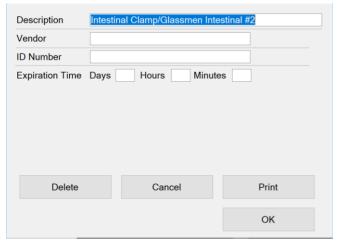

5. Press Print.

6. Enter the Label Caption. Begin typing any portion to select from a previosly saved list.




- 7. Enter the Print Quantity (number of labels to print) and then press **Print**.
- 8. The Instrument data is saved for later use.

3.6 Printing Loaner Tray Labels


- 1. Press Login. Enter your Employee ID and press Enter.
- 2. Press Loaner Tray and then select a Surgeon.




3. Enter the Department, Vendor and Procedure. Begin typing any portion to select from a previously saved list.

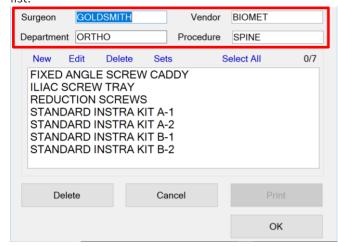

- 4. Select trays from the list or press **New** to create a new tray.
- 5. To print labels for multiple sets of the same tray, press **Sets**.
- 6. Press Print.

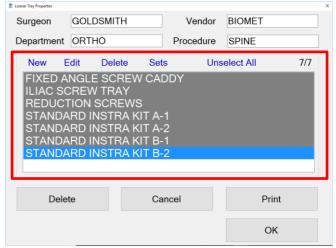


7. Enter the Label Caption. Begin typing any portion to select from a previously saved list.

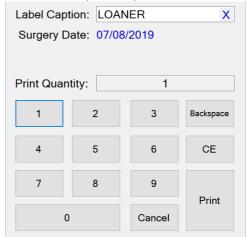

8. Enter the Print Quantity (number of labels to print) and then press **Print**.

3.7 Creating New Labels

- 1. Press **Login**. Enter the Administrator's Password (default is Admin, case sensitive), and then press **Enter**.
- 2. Press Communication and then select a button.

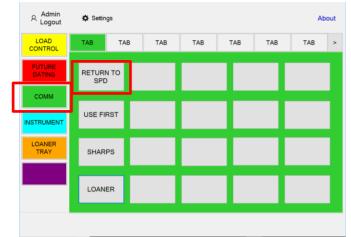


Enter the Button Properties and the press OK.
 Note: This screen may vary depending on the label format you are using.

Button Caption	RETURN TO SPD				
Description 1	RETURN				
Description 2	ТО				
Description 3	SPD				
Label Caption					X
Expiration Time	Days 0	Hour	rs 0	Minutes	
Delete				ОК	
				Cancel	

4. Press Settings.



5. Uncheck **Edit Mode** to resume Print Mode.

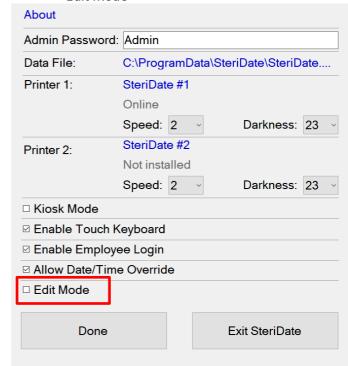

6. Press **Done**.

4. MAINTENANCE

Part	Frequency	Method
Printer Print Head	Recommended when changing a label roll.	 Turn off the printer. Allow the print head to cool down for one minute. Use a Head Cleaner Pen or a cotton swab and 100% ethanol to clean the print head surface. IMPORTANT: Do not touch printer head by hand. Use 100% Ethenol. DO NOT use medical alcohol, which may damage the printer head.
		Head Cleaner Pen
Printer Platen Roller	Recommended when changing a label roll.	 Turn off the printer. Rotating the platen roller, use a cotton swab and 100% ethanol to clean it.
Printer Gap Sensor	Monthly	Compressed air or vacuum.
Printer Exterior	As needed	Wipe with water-dampened cloth.
Printer Interior	As needed	Brush or vacuum.
Tablet or Terminal Exterior	As needed	Wipe with soft, lint-free cloth. Caution: Do not use sharp objects or abrasive cleaners; they can cause damage.

5. TROUBLESHOOTING

Problem	Symptoms	Recovery
Printer	Not printing.	 Verify the USB cable is connected, and the printer has power. See Setting Up the Printer(s). Verify the printer is installed and online. See Adjusting the Settings. Verify the correct printer and format are selected. See Adjusting Category Properties. Restart the system. See Starting the System.
Printer	Nothing prints on the label.	 Remove any stuck labels. Reload the label roll. See Loading Labels. Reload the ribbon. See Loading the Ribbon.
Printer	 Skipping labels. Continuous feeding labels. 	1. Re-calibrate the gap sensor. See To calibrate the Label Gap Sensor.
Printer	Paper jam.	 Remove any stuck labels. Reload the label roll. See Loading Labels. Reload the ribbon. See Loading the Ribbon. Re-calibrate the gap sensor. See To calibrate the Label Gap Sensor.
Printer	Poor print quality.	 Clean the print head. See Maintenance. Reload the label roll. See Loading Labels. Reload the ribbon. See Loading the Ribbon. Re-calibrate the gap sensor. See To calibrate the Label Gap Sensor. Adjust the print speed and darkness. See Adjusting the Settings.
Tablet	Windows Critical Error: Start Menu and Cortana not working.	 Press Ctrl + Shift + Esc to access Windows Task Manager. On the top left corner of the screen click File, and then click on New Task (Run). Type msconfig. On the System Configuration window click the Boot tab. Select the Safe boot box and then check the Network option. Click Apply and then click Okay.
Tablet	 Tablet does not turn on or wake from sleep. Tablet shows a black screen with no Surface logo. Nothing happens when you press the power button. The tablet appears to be turned off or in a power-saving state. 	 Solution 1: Press the power button once Press and release the power button on the top-left side of the tablet. Note: The tablet may take a few seconds to start up or wake from sleep and display the Surface logo. Place the tablet on the dock to charge the battery. Note: Depending on how low the battery is, you may see a battery icon on the screen for 10 to 15 minutes before Windows starts. For Surface tablets, see Install Surface and Windows updates on the Windows Surface Support website. Solution 2: Force restart Press and hold the power button on the top-left side of the tablet for 30 seconds to power down the tablet. Note: The screen may flash. Continue to hold down the power button and release it after the full 30 seconds. Press and release the power button on the top-left side of the tablet to turn it back on.
		3. For Surface tablets, see <u>Install Surface and Windows updates</u> on the Windows Surface Support website.

6. PRINTER CALIBRATIONS

To calibrate the Label Gap Sensor

- 1. Turn off the power switch.
- 2. Hold on the feed button (located in the front of the printer) then turn on the power switch (Do not release feed button yet).
- 3. Release the feed button when LED becomes red and blinking. (Any red will do during the 5 blinks).
- 4. It will calibrate the gap/black mark sensor sensitivity.

Other Calibrations

Power On Utilities	The LED color will change as following pattern:						
	Amber	Red (5 blinks)	Amber (5 blinks)	Green (5 blinks)	Green/Amber (5 blinks)	Red/Amber (5 blinks)	Solid Green
Gap/Black Mark Sensor		Release					
Gap/Black Mark Sensor Self-test & enter dump mode			Release				
Printer Initialization				Release			
Set black mark sensor as media sensor and calibrate the black mark sensor					Release		
Set gap sensor as media sensor and calibrate the gap sensor						Release	
Skip AUTO.BAS							Release

7. LABEL FORMATS

This section shows all the label formats that are available in the SteriDate System. The table blow shows which Applications and Label Formats are included in each of the 3 editions of the SteriDate software.

Software Edition	Applications	Label Formats	
Essentials	Load Control	1-10, 25	
Esserrials	Communication	11-14, 24	
Advanced	Loaner Tray	15-16	
Auvanceu	Peel Pack	17-22	
	Load Control	1-10, 25	
Complete	Communication	11-14, 24	
Complete	Loaner Tray	15-16	
	Peel Pack	17-22	

For information on where the data comes from for each of the fields that print on each label format, see the *Label Data Sources* section below.

Format 1 - 1.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete



Field	Shown As	Max Print Characters
Sterilizer ID-Load Number	01-04	7
User ID	CDV	6
Label Caption	STERILIZED	10
Today's Date	10/17/17	-
Label Message	STERILE UNLESS	60

Format 2 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete

SPD-02-07 CDV
STEAM STERILIZED
10/17/17 9:14 AM
STERILE UNLESS OPENED OR DAMAGED. CHECK BEFORE USING.

Field	Shown As	Max Print Characters
Department- Sterilizer ID-Load Number	SPD-02-07	16
User ID	CDV	6
Label Caption	STEAM STERILIZED	20
Today's Date & Time	10/17/17 9:14 AM	-
Label Message	STERILE UNLESS	60

Format 3 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete

STERILIZER:03 LOAD: 08
DEPT: SPD TECH: CDV

STEAM STERILIZED

10/17/17 9:15 AM

STERILE UNLESS OPENED OR DAMAGED. CHECK BEFORE USING.

Format 4 - 1.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete



Format 5 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete

02-290-07 CDV

STEAM STERILIZED

10/17/17 9:21 AM

STERILE UNLESS OPENED OR DAMAGED. CHECK BEFORE USING.

Field	Shown As	Max Print Characters
Sterilizer ID	03	6
Load Number	08	5
Department	SPD	10
User ID	CDV	6
Label Caption	STEAM STERILIZED	20
Today's Date & Time	10/17/17 9:15 AM	-
Label Message	STERILE UNLESS	60

Field	Shown As	Max Print Characters
Sterilizer ID- Julian Date-Load Number	04-290-07	15
User ID	CDV	6
Label Caption	STERILIZED	10
Today's Date	10/17/17	-
Label Message	STERILE UNLESS	60

Field	Shown As	Max Print Characters
Sterilizer ID-	04-290-07	15
Julian Date-Load		
Number		
User ID	CDV	6
Label Caption	STEAM STERILIZED	20
Today's Date &	10/17/17 9:21 AM	-
Time		
Label Message	STERILE UNLESS	50

Format 6 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete

STERILIZER:03 LOAD: 06
JULIAN DATE: 290 TECH: CDV
STEAM STERILIZED
10/17/17 9:23 AM
STERILE UNLESS OPENED OR
DAMAGED. CHECK BEFORE USING.

Format 7 - 1.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete



Format 8 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete



Field	Shown As	Max Print Characters
Sterilizer ID	03	6
Load Number	06	5
Julian Date	290	3
User ID	CDV	6
Label Caption	STEAM STERILIZED	20
Today's Date & Time	10/17/17 9:23 AM	-
Label Message	STERILE UNLESS	50

Field	Shown As	Max Print Characters
Sterilizer ID-Load Number	04-07	15
User ID	CDV	6
Label Caption	STERILIZED	10
Today's Date	10/17/17	-
Fixed	EXPIRES	-
Expiration Date	10/17/17	-

Field	Shown As	Max Print Characters
Sterilizer ID	04	6
Load Number	07	5
Department	SPD	10
User ID	CDV	6
Label Caption	STEAM STERILIZED	20
Today's Date & Time	10/17/17 9:28 AM	-
Fixed	EXPIRES	-
Expiration Date & Time	10/17/18 9:28 AM	-

Format 9 - 1.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete



Format 10 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete

STERILIZER:04 LOAD: 07
CYCLE:1962 TECH: CDV
STERILIZED: 10/17/17 9:44 AM

EXP 10/17/18 09:44 AM
STERILE UNLESS OPENED OR
DAMAGED. CHECK BEFORE USING.

Format 11 - 2.2" X 1.1"

Application: Communication

Included with Software Editions: Essentials, Complete

RETURN TO SPD

Field	Shown As	Max Print Characters
Cycle Count	12350	5
User ID	Admin	6
Sterilizer ID	NX100-01	10
Today's Date	10/17/17	-
Label Message	STERILE UNLESS	60

Field	Shown As	Max Print Characters
Sterilizer ID	04	6
Load Number	07	5
Cycle Count	1962	5
User ID	CDV	6
Today's Date & Time	10/17/17 9:44 AM	-
Expiration Date & Time	10/17/18 9:44 AM	-
Label Message	STERILE UNLESS	50

Field	Shown As	Max Print Characters
Description 1	RETURN	15
Description 2	ТО	15
Description 3	SPD	15

Format 12 - 2.2" X 1.1"

Application: Communication

Included with Software Editions: Essentials, Complete

LOANER TRAY RECEIVED

02/27/17 4:47 PM

CD

Format 13 - 2.2" X 1.1"

Application: Communication

Included with Software Editions: Essentials, Complete

EXPIRES ON 03/29/17 04:50 PM RETURN TO SPD

Format 14 - 2.2" X 1.1"

Application: Communication

Included with Software Editions: Essentials, Complete

DR. LORENZO IMPLANTABLE SET 01-03

07/27/18 1:30 PM

Field	Shown As	Max Print Characters
Description 1	LOANER	15
Description 2	TRAY	15
Description 3	RECEIVED	15
Today's Date & Time	02/27/17 4:47 PM	-
User ID	CD	6

Field	Shown As	Max Print Characters
Description 1	EXPIRES ON	15
Expiration Date & Time	10/17/18 9:44 AM	-
Label Caption	RETURN TO SPD	25

Field	Shown As	Max Print Characters
Description 1	DR. LORENZO	20
Description 2	IMPLANTABLE	20
Sequence Number	SET 01-03	-
Today's Date & Time	02/27/17 4:47 PM	-

Format 15 - 4.0" X 2.0" & Format 16 - 2.0" X 4.0"

Application: Loaner Tray

Included with Software Editions: Advanced, Complete

NUVASIVE

Knee

GOLDSMITH

Main OR-Ortho

FEMORAL TRIALS XP (SET 1 OF 2)

SURGERY DATE: 02/21/2017

TRAY 1 OF 2

Field	Shown As	Max Print Characters
Label Caption (Header)	LOANER TRAY	20
Vendor	NUVASIVE	20
Procedure	Knee	15
Surgeon	GOLDSMITH	20
Department	Main OR-Ortho	15
Tray Name	FEMORAL TRAILS XP	50
Set Sequence	(SET 1 OF 2)	-
Surgery Date	02/21/2017	-
Tray Sequence	TRAY 1 OF 2	-

Format 17 - 4.0" X 2.0" & Format 18 - 2.0" X 4.0"

Application: Peel Pack

Included with Software Editions: Advanced, Complete


MAIN OR
BIOMET ARTHROTEK
ARTHROSCOPE, CANNULAS &
SHAVER SET
1224567900
1234567890 01/02/18 12:00 PM CD

Field	Shown As	Max Print Characters
Label Caption (Header)	MAIN OR	20
Vendor	BIOMET	20
Description	ARTHROTEK ARTHROSCOPE	50
ID Number	1234567890 (Code 128 Barcode)	20
Today's Date & Time	01/02/18 12:00 PM	-
User ID	CD	6

Format 19 - 2.2" X 1.1"

Application: Peel Pack

Included with Software Editions: Advanced, Complete

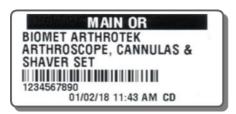


Field	Shown As	Max Print Characters
Label Caption (Header)	MAIN OR	20
Vendor	BIOMET	20
Description	ARTHROTEK ARTHROSCOPE	50
ID Number	1234567890 (Code 128 Barcode)	15
Today's Date & Time	01/02/18 11:43 AM	-
User ID	CD	6

Format 20 - 4.0" X 2.0" & Format 21 - 2.0" X 4.0"

Application: Peel Pack

Included with Software Editions: Advanced, Complete

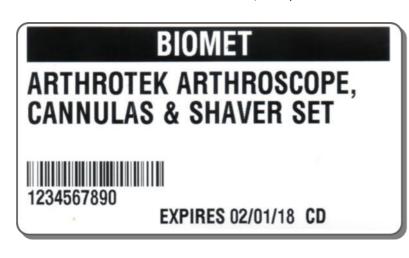


Field	Shown As	Max Print Characters
Vendor (Header)	BIOMET	20
Description	ARTHROTEK ARTHROSCOPE	70
ID Number	1234567890 (Code 128 Barcode)	20
Expiration Date	02/01/18	-
User ID	CD	6

Format 22 - 2.2" X 1.1"

Application: Peel Pack

Included with Software Editions: Advanced, Complete

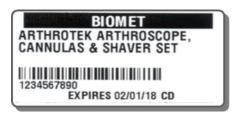

Field	Shown As	Max Print Characters
Vendor (Header)	BIOMET	20
Description	ARTHROTEK ARTHROSCOPE	70
ID Number	1234567890 (Code 128 Barcode)	15
Expiration Date	02/01/18	-
User ID	CD	6

Format 23 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete

TECH ID: CDV

HIGH LEVEL DISINFECTED ENDOSCOPE W/LUMEN DATE DISINFECTED 10/17/17 REPROCESS ON 11/01/17

Format 24 - 2.2" X 1.1"

Application: Communication

Included with Software Editions: Essentials, Complete

DESCRIPTION

OPENED ON: 06/22/18 EXPIRES ON: 08/21/18

TECH ID: CD

Format 25 - 2.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete

WASHER:01 CYCLE:1962 TECH:SD ASSEMBLED BY: AW STEAM #1 LOAD:01 TECH:CD Arthroscopes 10/24/18 3:57 PM

Indefinite Shelf Life Unless Damaged, Open, or Wet

Field	Shown As	Max Print Characters
User ID	CDV	6
Label Caption	HIGH LEVEL DISINFECTED	25
Description	ENDOSCOPE W/LUMEN	30
Fixed	DATE DISINFECTED	-
Today's Date	10/17/17	10
Fixed	REPROCESS ON	-
Expiration Date	11/01/17	10

Field	Shown As	Max Print Characters
Description	DESCRIPTION	30
Fixed	OPENED ON:	-
Today's Date	06/22/18	10
Fixed	EXPIRES ON:	-
Expiration Date	08/21/18	10
User ID	CD	6

Field	Shown As	Max Print Characters
Custom 1	WASHER:01	12
Custom 2	CYCLE:1962	10
Custom 3	TECH:SD	8
Custom 4	ASSEMBLED BY:AW	16
Sterilizer ID	STEAM #1	15
Load Number	01	2
User ID	CD	4
Label Caption	Arthroscopes	20
Today's Date & Time	10/24/18 3:57 PM	-
Label Message	Indefinite Shelf Life	50

Format 26 - 1.2" X 1.1"

Application: Load Control

Included with Software Editions: Essentials, Complete



Field	Shown As	Max Print Characters
Sterilizer ID	OVEN 01	12
Cycle Count	234	5
User ID	CD	6
Label Caption	STERILIZED	20
Today's Date	07/03/19	-
Fixed	EXPIRES	-
Expiration Date	07/31/19	-

8. LABEL DATA SOURCES

The table below shows all the data fields that can be printed on a label and where the data for each of them would come from.

Field	Data Comes From
Custom 1-4	Field Name: Category Properties
	Data: Custom Data
Cycle Count	The selected Tab. Can be edited on the Print Screen
Department	Load Control Formats: Button Properties
	Loaner Tray Formats: Loaner Tray Properties
	If empty, the Default Expiration Time in Category Properties is used.
Description	Instruments: Item Properties
Description 1	Button Properties
Description 2	Button Properties
Description 3	Button Properties
Expiration Date	System Variable. Can be edited on the Print Screen
Expiration Date & Time	System Variable.
Expiration Time in Days,	Button Properties. If empty, the Default Expiration Time in Category Properties is used.
Hours and Minutes	
Fixed	System Variable
ID Number	Instruments: Item Properties
Julian Date	System Variable
Label Caption	Button Properties. If empty, the Default Label Caption in Category Properties is used.
Label Message	Category Properties
Load Number	Button Properties
Procedure	Loaner Tray Properties
Sequence Number	System Variable
Set Sequence	System Variable
Sterilizer ID	If Category Mode is Buttons, the data comes from Button Properties.
	If Category Mode is Tabs, the data comes from the Tab Name in the Category Properties.
Surgeon	Loaner Tray Properties
Surgery Date	System Variable. Can be edited on the Print Screen
Today's Date	System Variable. Can be edited on the Print Screen
Today's Date & Time	System Variable
Tray Name	Loaner Tray Properties
Tray Sequence	System Variable
User ID	Login Screen
Vendor	Loaner Tray: Loaner Tray Properties
	Instruments: Item Properties

9. ABOUT STERIDATE LABELS

Storage Recommendation

Labels should be stored at a temperature of 22°C ±2 and at a relative humidity of 50% ±5. The nearer to these conditions, the better. Further recommendations are as follows:

- Store in original packaging
- Store away from direct sunlight
- Rotate stocks so that the oldest labels are used first
- Store label rolls horizontally, not vertically
- Ensure that winding tension of label roll is not too tight, to prevent adhesive bleed
- Do not hang rolls of labels on pegs, or stack them in such a way that the inner core is distorted
- Repack partly used rolls of labels in their original packaging.

NOTE: Storage at too high a temperature may have a detrimental effect on a product's performance. Low temperatures are generally less critical, but thorough subsequent reconditioning is nevertheless important to avoid conversion or dispensing problems.

Handling

- Remember that label roll cores are at their most vulnerable on the extreme edges. Handle with care.
- Rough handling of label rolls can cause the core and/or edges to become damaged. Eventually, this can lead to breakage on the printer machine.
- Avoid leaving label rolls in areas where they can be damaged by heavy items that could bruise or crush the edges.

Instructions for Use

- Apply label onto clean, dry, flat surface.
- Press label firmly in place including the edges.

Shelf life

MedVantage SteriDate labels include 6-month guarantee on adhesive performance.

Warranty

All statements, technical information and recommendations about MedVantage label products are based upon tests believed to be reliable but do not constitute a guarantee or warranty. All MedVantage products are sold with the understanding that PURCHASER has independently determined the suitability of such products for its purposes. MedVantage products are warranted to be free of defects or workmanship for a period 30 days from delivery; after which the customer assumes all responsibility for the product. Any product shown to the satisfaction of MedVantage within the time provided to be so defective shall be replaced without charge or MedVantage may issue credit in such amount as it deems reasonable however, in no event shall MedVantage be responsible for claims beyond the replacement value of the defective product or in any way liable or responsible for consequential or incidental damages.

NO EXPRESS WARRANTIES AND NO IMPLIED WARRANTIES, WHETHER OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE, OR OTHERWISE, EXCEPT AS SET FORTH ABOVE (WHICH IS MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES) SHALL APPLY TO PRODUCTS SOLD BY MEDVANTAGE. MEDVANTAGE SPECIFICALLY DISCLAIMS AND EXCLUDES ALL OTHER SUCH WARRANTIES. NO WAIVER, ALTERATION, ADDITION OR MODIFICATION OF THE FOREGOING CONDITIONS SHALL BE VALID UNLESS MADE IN WRITING AND SIGNED BY AN EXECUTIVE OFFICER OF MEDVANTAGE.

No salesman, representative, or agent of MEDVANTAGE is authorized to give any guarantee, warranty or make any representation contrary to the above.

10. TECHNICAL SUPPORT

Exclusively for Customers purchasing SteriDate labels and supplies from MedVantage, the SteriDate Support Program includes:

- Technical support at no charge
- Repair service
- Loaner equipment

We recommend contacting Tech Support as soon as any problem occurs as most of the common issues can be resolved over the phone.

Live Phone Support: 201-587-9100 x212 Email Support: support@medvantage.org Monday-Thursday 8:30 AM to 4:30 PM ET Friday 8:30 AM to 3:00 PM ET

To help expedite service, we suggest having your MedVantage Account Number available. After diagnosing the issue, we may suggest specific troubleshooting and/or require you send the equipment in for repair service.

Repair Service

Before sending equipment in for repair, please contact Tech Support to request a Return Authorization Number and shipping instructions.

Warranty Information

Standard Manufacturer Warranty on SteriDate Terminals is three (3) years and on SteriDate Printers is one (1) year. Parts and labor to correct defects in material and workmanship are provided free of charge. Turn-around time is typically within ten (10) business days but in some cases may take up to thirty (30) days. Thermal Printheads: Six (6) months or one (1) million Inches; whichever occurs first.

Note: Only genuine labels and supplies are recommended for use in our products. The warranty does not cover service required due to abuse or the use of non-recommended supplies.

Service Agreements

Provide additional coverage over the standard Manufacturer's Warranty. Coverage for SteriDate printers includes thermal printheads, normal wear and tear and accidental breakage.

Loaner Equipment

Based on availability. Cost - \$100 per Incident. Loaner equipment must be returned immediately. An additional fee of \$20 per day will be charged if the Customer does not ship the defective equipment to the Service Department within three (3) business days of receiving the loaner equipment or does not return the loaner equipment within three (3) business days after receiving the repaired equipment.

Out of Warranty Repairs

Repairs are performed on a time and material basis. The Customer will be informed before any work is performed. If the Customer does not wish the repair to be performed, a \$50 diagnostic service fee will be charged.

Shipping

The Customer is responsible for inbound shipment and assumes all costs and associated risks. MedVantage is responsible outbound transportation chargers, UPS Ground. Higher priority shipment is available at Customer's expense. If the Service Department determines the equipment has no defect or is not under warranty, the Customer shall be responsible also for return shipment.

This program is subject to change without notice.



230 West Passaic Street Maywood NJ, 07607

Call 201-587-9100

Email <u>customerservice@medvantage.org</u>

Visit http://medvantage.org/sterile-processing